

1. Connect the cables and power on the device.
2. Press the "ENT" key and the "up" arrow key simultaneously.
3. Press the "M" key and the "up" arrow key simultaneously. The meter will display "LC.CAL".
4. Press the "ENT" key. The meter will show a five - digit number. Use the up arrow key and the right arrow key to change the value. The up arrow key is used to change the value of the flashing digit, and the right arrow key is used to change the position of the flashing digit. Change the value to "3.0000".
5. Press the "ENT" key. The meter will display "SCALE".
6. Press the "ENT" key. The meter will show a five - digit number. Use the up arrow key and the right arrow key to change the value. The up arrow key is used to change the value of the flashing digit, and the right arrow key is used to change the position of the flashing digit. Change the value to the rated range of the sensor. (If the range of the sensor you are using is 10t, if you use kg as the unit, change the value to "10000". If you use t as the unit and there is a decimal point on the meter display, change it to the corresponding value. For example, if there is one decimal place, change it to "10.0"; if there are two decimal places, change it to "10.00".)
7. Press the "ENT" key. The meter will display "RT.CAL".
8. Press the "M" key multiple times until the meter displays "—END—".